

Getting started

Thank you for purchasing a *Logic Rail Technologies* product! Please familiarize yourself with all the instructions prior to installing this board.

This Infrared (IR) upgrade kit for the *Signal Animator* supplements the original instructions for ALL versions of the product (SA-1, SAD-SBCA, SAD-CC). The instructions herein describe the installation of the IR components. An Infrared (IR) emitter and detector are used for bidirectional train detection. Detection is achieved when the IR beam from the emitter reflects off the underside of the train back down to the detector. **Despite the use of infrared components you could still encounter false triggering from overhead lighting. This is usually eliminated with angled sensor mounting (Figure 1c) and/or proper sensor sensitivity adjustment (page 2). This version of the *Signal Animator* must be powered from either a 7-9V AC or 9-12V DC power source (such as our 12VPSR). Do NOT exceed these limits!**

Installing the *Signal Animator* replacement chip

The main chip (the one with the colored dot on it) on the *Signal Animator* must be replaced with the one that has "INV" on it. First, carefully pry the existing chip out of its socket using a flat blade screwdriver. Be VERY careful when doing this so that you do not damage the socket or circuit board. Next, carefully insert the replacement chip in the socket while making sure that the pins do not bend or fold underneath the chip. Make sure that the writing on the chip is in the same orientation as the *Signal Animator* name on the upper left hand corner of the board!

Mounting and wiring the IR components

The IR components should be mounted between the rails. Drill two 11/64" holes, approximately 1/4" apart, through the ballast, roadbed, and sub-roadbed. For the smaller scales this drilling may end up hitting the ties. Take your time so you don't mangle them! Figure 1a illustrates the suggested placement of the IR components between the rails; you may also locate them a tie apart from each other (Figure 1b). Insert the leads of one IR emitter (white and black wires) into one of the holes (it doesn't matter which one!) from the top of your layout. Repeat for the IR detector (blue and black wires). The tops of the components should sit no higher than the top of your ballast for optimal IR performance; in some cases (e.g. false triggering) it may be necessary to locate the components a little below the ballast line. You can extend the leads with similar (or larger) wire. We recommend soldering and insulating these connections. Once you have wired the IR components and verified their operation you may wish to put a dab of white glue or silicone caulk where the wires exit the holes underneath the layout. This will help to hold the components in place; make sure you don't get any substance (e.g. ballast or glue) on the top surface of the IR components as this may prevent them from operating properly. **Figure 1c is a variation of Figure 1b. In this case the IR components are mounted at an angle to each other. The benefit of this method is reduced false triggering from overhead light and increased detection reliability in smaller scales or irregular bottoms on rolling stock.**

 


Figure 1a

 


Figure 1b

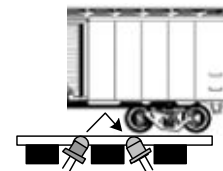


Figure 1c

Figure 2 illustrates the wiring for the IR components. The 180 ohm 1 Watt resistor is included with this upgrade kit. **WARNING:** The 180 ohm 1 watt resistor may become hot to the touch – take care so that you don’t burn yourself! When properly wired the emitter will have a very faint red glow coming from it. You can also look at the emitter through a digital camera and see the infrared light! **For safety reasons do NOT point the IR emitter directly into your eye or stare at the IR emitter!!!**

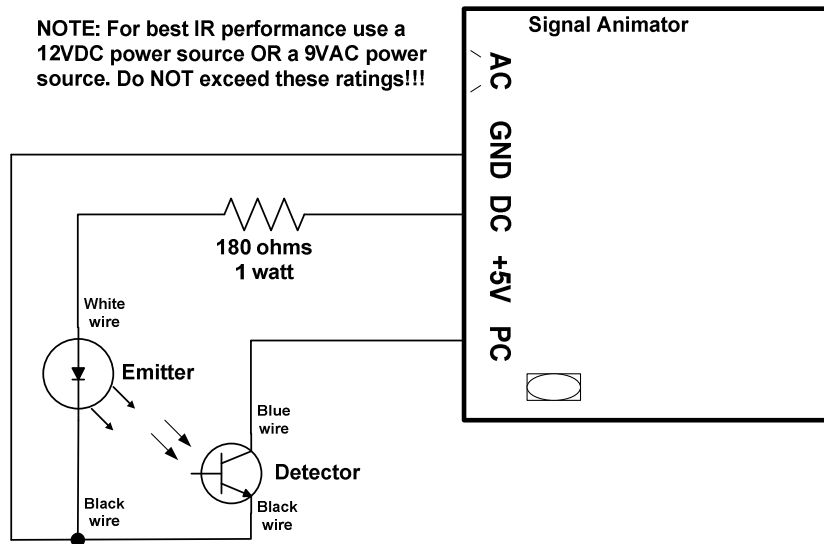


Figure 2 – IR component wiring

Power

When using the **Signal Animator** with IR you will need to provide 7-9V AC or 9-12V DC for power. Power consumption is approximately 75mA (PLUS whatever your signal consumes). If you are only using a single **Signal Animator** then use the TWO AC terminals to provide power (polarity doesn’t matter). **CAUTION:** Most AC or DC accessory terminals on your throttle/power pack exceed 12V and cannot be used with the **Signal Animator!** However, you can use those power sources in conjunction with our 12VPSR which will provide 12V DC. If you are using more than one **Signal Animator** you can power them all from a single 9-12V DC source as shown in Figure 3 below.

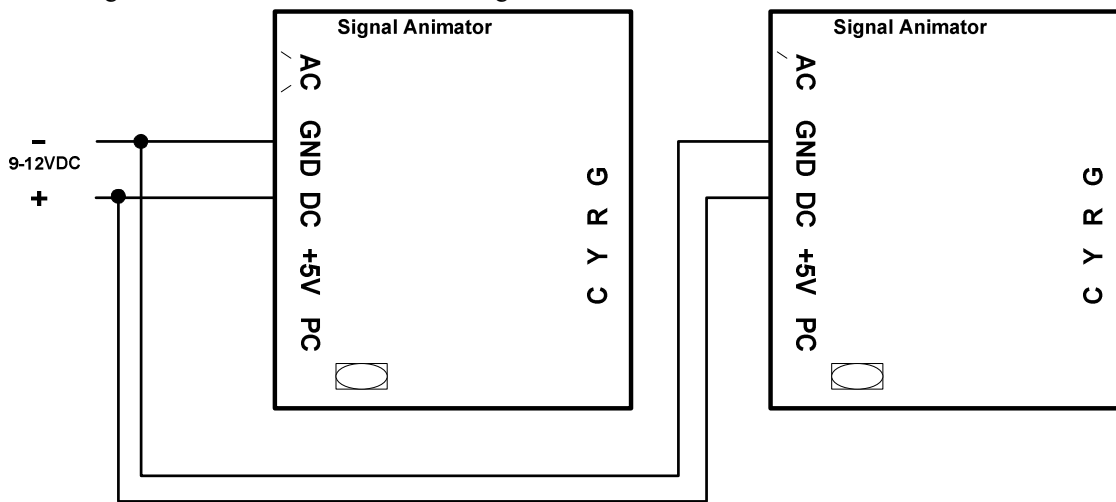


Figure 3 – DC power

Troubleshooting

If your signal is not changing colors when the sensor is activated or stays red all the time you can perform the following tests. First, verify the sensor wiring and sensitivity adjustment previously described. If the signal stays red all the time then disconnect the sensor’s blue wire. After two time delays the signal should return to green. If it does then there is a problem with the sensor. If your signal never changes from green then temporarily connect a wire between the PC terminal and the GND terminal. The signal should immediately change to red. If not, then the **Signal Animator** board should be returned to us for test/repair. If the signal did change to red then disconnect the temporary wire. The signal should proceed through its delay and color changes. If so then the problem lies with the sensor.

Warranty

This product is warranted to be free from defects in materials or workmanship for a period of one year from the date of purchase. **Logic Rail Technologies** reserves the right to repair or replace a defective product. The product must be returned to **Logic Rail Technologies** in satisfactory condition. This warranty covers all defects incurred during normal use of this product. This warranty is void under the following conditions:

- 1) If damage to the product results from mishandling or abuse.
- 2) If the product has been altered in any way (e.g. soldering).
- 3) If the current or voltage limitations of the product have been exceeded.

Requests for warranty service must include a dated proof of purchase, a written description of the problem, and return shipping and handling (\$6.00 inside U.S./\$10.00 outside U.S. - U.S. funds only). Except as written above, no other warranty or guarantee, either expressed or implied by any other person, firm or corporation, applies to this product.

Technical Support

We hope the preceding instructions are sufficient for answering any questions you might have about the installation of this product. However, technical support is available should you need it. We would ask that you first contact your place of purchase for assistance. If you still need further assistance then please do not hesitate to contact us. You can reach us via phone, mail and email; our contact information can be found on the top of page 1.